


# Marlin®

## LEVER ACTION 22 RIFLES

(Shorts, Longs,  
Long Rifles)

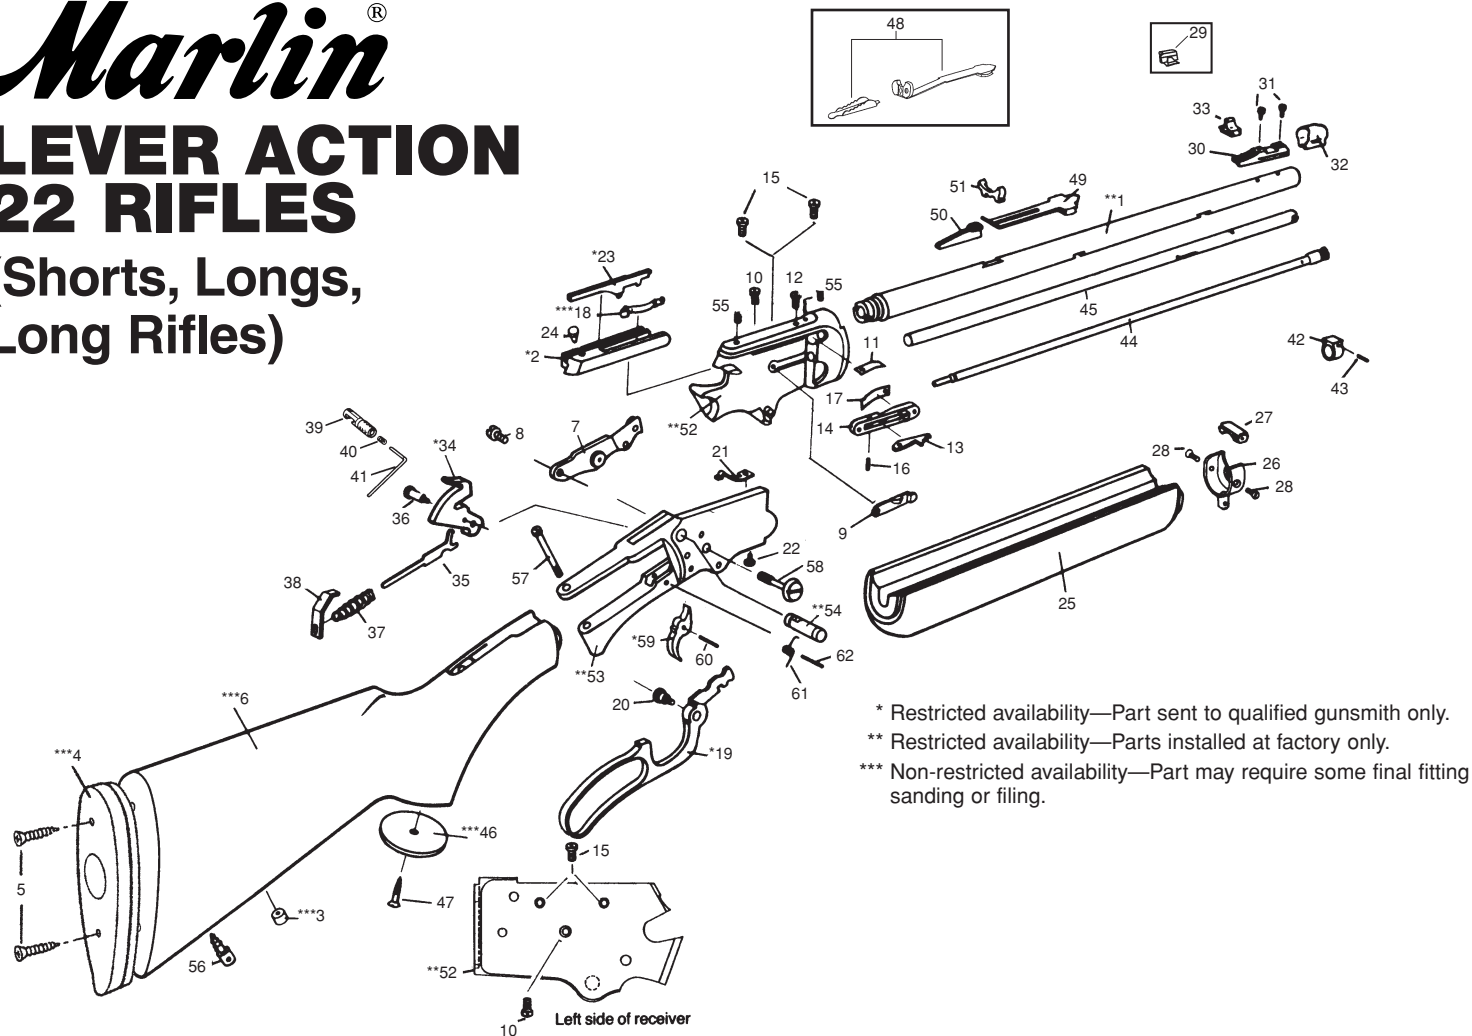

\* Restricted availability—Part sent to qualified gunsmith only.  
 \*\* Restricted availability—Parts installed at factory only.  
 \*\*\* Non-restricted availability—Part may require some final fitting sanding or filing.

### PARTS LIST LEVER ACTION 22 RIFLES

For parts prices, call 1-800-544-8892 (8 A.M. to 4:30 P.M., Eastern Time, Weekdays)  
 Be sure to mention gun serial number when ordering parts

ILL. NO.	PART NAME	ILL. NO.	PART NAME	ILL. NO.	PART NAME
**1	Barrel	*23	Firing Pin	45	Magazine Tube Outside
*2	Breech Bolt	24	Firing Pin Retaining Stud	***46	Pistol Grip Cap
***3	Bullseye	25	Forearm	47	Pistol Grip Cap Screw
***4	Buttpad	26	Forearm Tip	48	Rear Sight Complete
5	Buttpad Screw (2)	27	Forearm Tip Tenon	49	Rear Sight Base
***6	Buttstock	28	Forearm Tip Tenon Screw (2)	50	Rear Sight Elevator
7	Carrier Assembly	29	Front Sight Complete	51	Rear Sight Folding Leaf
8	Carrier Screw	30	Front Sight Ramp Base	**52	Receiver (Left Side)
9	Cartridge Cutoff	31	Front Sight Ramp Base Screw (2)	**53	Receiver (Right Side)
10	Cartridge Cutoff Screw	32	Front Sight Ramp Hood	**54	Safety Assembly
11	Cartridge Guide Spring	33	Front Sight Ramp Insert		Scope Adapter Base w/Screws (Not Shown)
12	Cartridge Guide Spring Screw	*34	Hammer		Scope Adapter Base Screw (2) (Not Shown)
	Ejector Base Assembly, Consisting of:	35	Hammer Rebound Strut	55	Scope Mount Dummy Screw (2)
13	.Ejector	36	Hammer Screw	56	Swivel Stud, Rear
14	.Ejector Base w/Rivet	37	Hammer Spring (Mainspring)	57	Tang Screw
15	.Ejector Base Screw (2)	38	Hammer Spring Adjusting Plate	58	Thumb Screw
16	.Ejector Pin	39	Hammer Spur Assembly (Includes Parts 40 & 41)	**59	Trigger
17	.Ejector Spring	40	Hammer Spur	60	Trigger Pin
***18	Extractor	41	Hammer Spur Wrench	61	Trigger Spring
*19	Finger Lever	42	Magazine Tube Band	62	Trigger Spring Pin
20	Finger Lever Screw	43	Magazine Tube Band Pin		
21	Finger Lever Spring	44	Magazine Tube Assembly		
22	Finger Lever Spring Screw				

<b>ILL. NO.</b>	<b>PART NAME</b>	<b>39A Part No.</b>
**1	Barrel	102020
*2	Breech Bolt	102386
***3	Bullseye	320101
***4	Buttpad	417002
5	Buttpad Screw (2)	420590
***6	Buttstock	502214
7	Carrier Assembly	502861
8	Carrier Screw	302492
9	Cartridge Cutoff	302189
10	Cartridge Cutoff Screw	302090
11	Cartridge Guide Spring	302294
12	Cartridge Guide Spring Screw	302290
	Ejector Base Assembly, Consisting of:	502068
13	Ejector	102068
14	Ejector Base w/Rivet	502167
15	Ejector Base Screw (2)	302091
16	Ejector Pin	302098
17	Ejector Spring	402095
***18	Extractor	202069
*19	Finger Lever	102470
20	Finger Lever Screw	302192
21	Finger Lever Spring	402196
22	Finger Lever Spring Screw	302193
*23	Firing Pin	202299
24	Firing Pin Retaining Stud	302152
25	Forearm	102017
26	Forearm Tip	502728
27	Forearm Tip Tenon	220429
28	Forearm Tip Tenon Screw (2)	320191
29	Front Sight Complete	N/A
30	Front Sight Ramp Base	221139
31	Front Sight Ramp Base Screw (2)	320991
32	Front Sight Ramp Hood	320245
33	Front Sight Ramp Insert	230744
*34	Hammer	102273
35	Hammer Rebound Strut	302274
36	Hammer Screw	302190
37	Hammer Spring (Mainspring)	420294
38	Hammer Spring Adjusting Plate	320175
39	Hammer Spur Assembly (Includes Parts 40 & 41)	502377
40	Hammer Spur Screw	420193
41	Hammer Spur Wrench	420204
42	Magazine Tube Band	220121
43	Magazine Tube Band Pin	420698
44	Magazine Tube Assembly	502522
45	Magazine Tube Outside	302223
***46	Pistol Grip Cap	320808
47	Pistol Grip Cap Screw	420290
48	Rear Sight Complete	502242
49	Rear Sight Base	520241
50	Rear Sight Elevator	320242
51	Rear Sight Folding Leaf	202242
**52	Receiver (Left Side)	102160
**53	Receiver (Right Side)	102261
**54	Safety Assembly	202183
	Scope Adapter Base w/Screws (Not Shown)	202231
	Scope Adapter Base Screw (2) (Not Shown)	302093
55	Scope Mount Dummy Screw (2)	320493
56	Swivel Stud, Rear	420793
57	Tang Screw	320391
58	Thumb Screw	302292
59	Trigger	102243
60	Trigger Pin	402097
61	Trigger Spring	402094
62	Trigger Spring Pin	420397